

# BATTERY BUD II

## DC POWER INTERFACE CABLES AND ACCESSORIES



BB-BAG 24/2

**BB-BAG-24/1** 24" Hirose to single right angle for Lectrosolics receivers and ISO9VOLT/SMBATELIM Battery Eliminators

**BB-BAG-24/2** 24" Hirose to dual right angle for Lectrosolics receivers and ISO9VOLT or SMBATELIM Battery Eliminators



BB-SDMX-12

**BB-SDMX-12** 12" Hirose to Hirose for Sound Devices MixPre/442, 302, 7-Series, SQN, PSC M4 mk2, M3 & AlphaMix, Wendt X5

**BB-SDMX-18** 18" Hirose to Hirose for Sound Devices MixPre/442, 302, 7-Series, SQN, PSC M4 mk2, M3 & AlphaMix, Wendt X5

**BB-DSD-212** 12" Hirose to (2) Hirose, "Y" cable with junction box for any (2) Sound Devices/PSC/SQN/Wendt above



BB-FPMX-12

**BB-FPMX-12** 12" Hirose to right angle for Shure FP33, FP32A

**BB-X4-12** 12" Hirose to right angle for Wendt X4 (Reverse Polarity)

**BB-CSMX-12** 12" Hirose to XLR-4F for Cooper CS104, Fostex PD-4/PD-6, Zaxcom Fusion 10/12

**BB-SD1FP-12** 12" Hirose to Coaxial cable for Sound Devices V1 MixPre & 442, MP-2, HX-3, Shure FP24 and Lectro Venue



BB-NP

**BB-NXL4M-12** 12" 4-pin XLR-Male to Hirose, (For 12-18 VDC Input to Battery Bud)

**BB-NXL4M-36** 36" 4-pin XLR-Male to Hirose, (For 12-18 VDC Input to Battery Bud)

**BB-NP** Standard cap to input NP-1 battery into the Battery Bud. 15" cable with Hirose

**CT-CAM-9** 9" Hirose to single right angle for Lectros used on a camera with Hirose 4 DC plug  
**CT-CAM-8/9** 8"/9" Hirose to dual right angle for Lectros used on a camera with Hirose 4 DC plug